



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
[] / MENU	MENU
→ / EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DVD	[] / SOURCE
AUX	-/--
DIMMER	[]
ZOOM	[]
MONO / STEREO	[]
SUBTITLE	[]
VOLUME+	VOL+
VOLUME -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
[] / ENTER	OK
↻ / RETURN	BACK
SLEEP	SLEEP
PORT	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
SD HD	EPG
BAND	FAV
EJECT	[] / NET TV
PAUSE	[]
STOP	[] / SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
CLEAR	SHIFT+EXIT
SOUND EDIT	SHIFT+ []
AUDIO UPSCALE	SHIFT+ []
VIRTUAL HEADPHONE	SHIFT+ []
VIRTUAL SOUND	SHIFT+ []
TUNING/CH+	SHIFT+UP
TUNING/CH -	SHIFT+DOWN
SLOW	SHIFT+RIGHT
REPEAT	SHIFT+BACK
STEP	SHIFT+SLEEP
P.BASS	SHIFT+RED
REMAIN	SHIFT+GREEN
TUNER MEMORY	SHIFT+YELLOW
SMART VOLUME	SHIFT+BLUE

