



| ORIGINAL          | REPLACEMENT |
|-------------------|-------------|
| POWER             | POWER       |
| MUTE              | MUTE        |
| MENU              | MENU        |
| EXIT              | EXIT        |
| 1 / RDS DISPLAY   | 1           |
| 2                 | 2           |
| 3 / TA            | 3           |
| 4 / PTY-          | 4           |
| 5 / PTY SEARCH    | 5           |
| 6 / PTY+          | 6           |
| 7/8/9/0           | 7/8/9/0     |
| DOLBY PL. II MODE | AV          |
| MO/ST / SLOW      | -/--        |
| LOGO              |             |
| ZOOM              |             |
| SOUND EDIT        |             |
| SUB TITLE         |             |
| VOLUME -/+        | VOL -/+     |
| SKIP PREV./NEXT   | P -/+       |
| UP                | UP          |
| DOWN              | DOWN        |
| LEFT              | LEFT        |
| RIGHT             | RIGHT       |
| ENTER             | OK          |
| / RETURN          | RETURN      |

| ORIGINAL            | REPLACEMENT |
|---------------------|-------------|
| SLEEP               | SLEEP       |
| TV / VIDEO          | TV/DTV      |
| INFO                | INFO        |
| SD/HD / TUNER MEM.  | EPG         |
| P. BASS             | FAV         |
| OPEN / CLOSE        |             |
| PAUSE               |             |
| STOP                |             |
| REW                 | GREEN       |
| PLAY                | YELLOW      |
| FWD                 | BLUE        |
| AUDIO               | SHIFT+MUTE  |
| CANCEL              | SHIFT+EXIT  |
| DVD                 | SHIFT+1     |
| TUNER               | SHIFT+2     |
| PORT                | SHIFT+3     |
| AUX                 | SHIFT+4     |
| DOLBY PL. II EFFECT | SHIFT+AV    |
| DSP / EQ.           | SHIFT+      |
| TUNING/CH -         | SHIFT+ P-   |
| TUNING/CH +         | SHIFT+ P+   |
| REPEAT              | SHIFT+BACK  |
| STEP                | SHIFT+SLEEP |
| DIMMER              | SHIFT+INFO  |
| REMAIN              | SHIFT+      |

