



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
→ / EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
TIMER/CLOCK	-/--
P. SOUND	
ZOOM	
DEMO/DIMMER	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
↵ / ENTER	OK
↶ / RETURN	BACK
SLEEP	SLEEP
MO/ST	TV/DTV
INFO	INFO
TUNER MEMORY	EPG

ORIGINAL	SUPERIOR
CD RIPPING	FAV
EJECT	▲ / NET TV
PAUSE	⏸ / SMART TUBE
STOP	■ / SMART VIDEO
REW	GREEN
PLAY	YELLOW
FWD	BLUE
TIMER ON/OFF	SHIFT+POWER
AUDIO	SHIFT+MUTE
AUX	SHIFT+1
DVD	SHIFT+2
TUNER	SHIFT+3
USB	SHIFT+4
TUNING+	SHIFT+ P+
TUNING -	SHIFT+ P -
TRE/BASS	SHIFT+TV/DTV
ANGLE	SHIFT+EPG

