



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
/ MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
EQ.	AV
MO. / ST.	-/--
DSP.	
ZOOM	
ANGLE	
SUBTITLE	
VOL+	VOL+
VOL-	VOL-
SKIP NEXT	P+
SKIP PREV.	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
/ ENTER	OK
/ RETURN	BACK
SLEEP	SLEEP
DNSE	TV/DTV
i / INFO	INFO

ORIGINAL	SUPERIOR
TUNER MEMORY	EPG
P. SOUND	FAV
EJECT	
PAUSE	
STOP	
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
AUX 1	SHIFT+1
AUX 2	SHIFT+2
D. IN	SHIFT+3
DVD	SHIFT+4
TUNER	SHIFT+5
USB	SHIFT+6
TREB. / BASS	SHIFT+ -/--
TUNING DOWN	SHIFT+ P-
TUNING UP	SHIFT+ P+
DIMMER	SHIFT+INFO
CD RIPPING	SHIFT+FAV
REMAIN	SHIFT+

