



ORIGINAL	SUPERIOR
STANDBY / ON	POWER
[] / MENU	MENU
→ / EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT SEL.	[] / AV
SELECT – DVD	-/--
TIT. LIST / DISC MENU	[]
REC. PAUSE / TIME SH.	[]
MARKER	[]
SUBTITLE	[]
PROG.+	P+
PROG.-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
[] / OK	OK
↻ / RETURN	BACK
TIMER	SLEEP
TV / DVD	TV/DTV
i / INFO	INFO
GUIDE	EPG
PLAY LIST / TIT. MENU	FAV
OPEN / CLOSE	[]

ORIGINAL	SUPERIOR
PAUSE	[]
STOP	[]
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
SELECT – HDD	SHIFT+AV
SELECT – USB	SHIFT+ -/--
SKIP PREV.	SHIFT+ P-
SKIP NEXT	SHIFT+ P+
REPEAT	SHIFT+BACK
DTV / ANALOG	SHIFT+ TV/DTV
REC. MODE	SHIFT+FAV
RED / A	SHIFT+RED
GREEN / B	SHIFT+GREEN
YELLOW / C	SHIFT+YELLOW
BLUE / D	SHIFT+BLUE

