



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
	-/--
CC/AD	
+	VOL+
-	VOL -
	P+
	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SAMSUNG TV PLUS	TV7DTV
GUIDE	EPG
DISNEY+	FAV
NETFLIX	 / NET TV
PLAY/PAUSE	 / SMART TUBE
PRIME VIDEO	 / SMART VIDEO
RED	RED
GREEN	GREEN

[illegible]