



ORIGINAL	SUPERIOR
POWER	POWER
AUDIO	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT NEXT	AV
+100	-/--
INDEX	
PICTURE	
SYSTEM	
AUDIO DUB	SHIFT+MUTE
TRACKING+/-	VOL+/VOL-
P+ / P-	P+ / P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
TV VCR	TV/DTV
TV VIDEO	SHIFT+TV/DTV
INFO	INFO
EPG	EPG
EJECT	
PAUSE	

ORIGINAL	SUPERIOR
STOP	
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
ART	SHIFT+1
MONITOR RAW INPUT	SHIFT+2
OUTPUT SYSTEM	SHIFT+3
STROBE	SHIFT+4
INPUT SYSTEM	SHIFT+AV
CLK COUNT	SHIFT+/-/--
STROBE ART+/-	SHIFT+VOL+/VOL-
SLOW+	SHIFT+UP
SLOW-	SHIFT+DOWN
TRACKING AUTO	SHIFT+OK
SHUTTLE BACK	SHIFT+GREEN
SHUTTLE FWD	SHIFT+BLUE
REC SPEED	SHIFT+RED

