



ORIGINAL	SUPERIOR
STANDBY/ON	POWER
AUDIO	MUTE
□□□ / MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
VCR	📺 / SOURCE
DVD	-/--
ANGLE	📺
SPEED	📺
SUBTITLE	📺
PROG/TRK+	P+
PROG/TRK-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
📺 / OK	OK
↺ / RETURN	BACK
F. ADV / STEP	SLEEP
TV/VCR	TV/DTV
INFO	INFO
EZ VIEW	EPG
MARK SEARCH	FAV
OPEN/CLOSE	📺 / NET TV

ORIGINAL	SUPERIOR
TIMER	⏸
STOP	📺 / SMART
REC	RED
REW/SKIP PREV	GREEN
PLAY/PAUSE	YELLOW
FWD/SKIP NEXT	BLUE
DISC. MENU	SHIFT+MENU
REPEAT	SHIFT+BACK
TV	
STANDBY/ON	SHIFT+POWER
TV MUTE	SHIFT+MUTE
1/2/3/4/5	SHIFT+1/2/3/4/5
6/7/8/9/0	SHIFT+6/7/8/9/0
VOL+	SHIFT+ VOL+
VOL -	SHIFT+ VOL -
PROG+	SHIFT+ P+
PROG -	SHIFT+ P -

