



ORIGINAL	SUPERIOR
STANDBY/ON	POWER
MUTE	MUTE
 / MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT SEL.	 / SOURCE
DISC MENU	-/--
EZ VIEW	
F. ADV / STEP	
SPEED	
SUBTITLE	
TRK+	VOL+
TRK -	VOL -
PROG+	P+
PROG -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
 / OK	OK
 / RETURN	BACK
TIMER	SLEEP
TV/VCR	TV/DTV
INFO	INFO

[illegible]