


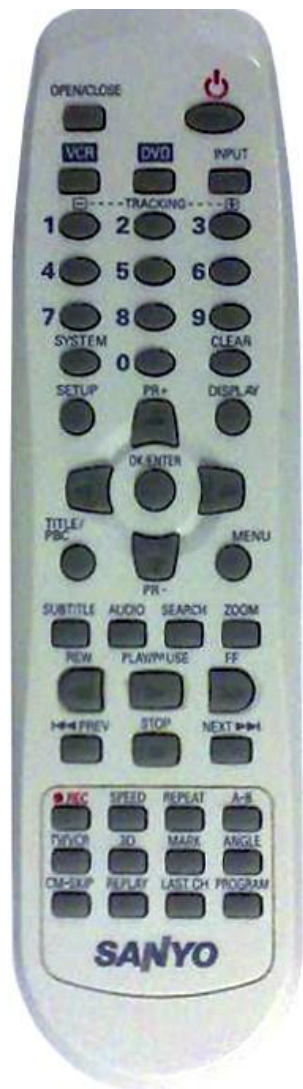

ORIGINAL	SUPERIOR
	POWER
AUDIO	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	/ AV
ANGLE	-/--
DISPLAY	
ZOOM	
SETUP	
SUBTITLE	
SKIP NEXT	P+
SKIP PREV.	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK / ENTER	OK
LAST CH.	BACK
SPEED	SLEEP
TV / VCR	TV/DTV
TITLE / PBC	INFO
PROGRAM	EPG
MARK	FAV

ORIGINAL	SUPERIOR
OPEN / CLOSE	
STOP	
REC	RED
REW	GREEN
PLAY	YELLOW
FF	BLUE
SYSTEM	SHIFT+MENU
SEARCH	SHIFT+EXIT
VCR	SHIFT+1
DVD	SHIFT+2
3D	SHIFT+3
CM – SKIP	SHIFT+
REPLAY	SHIFT+
TRACKING+	SHIFT+ VOL+
TRACKING-	SHIFT+ VOL-
PR.+	SHIFT+ P+
PR.-	SHIFT+ P-
REPEAT	SHIFT+BACK
A – B	SIFT+SLEEP

