



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
S.T.CH	-/--
SEARCH MODE	
PICTURE MODE	
SETUP	
FUNCTION	
VOLUME+	VOL+
VOLUME -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
TRIM	TV/DTV
I.MEMO	INFO
PROGRAM/RANDOM	EPG

ORIGINAL	SUPERIOR
ANGLE	FAV
OPEN/CLOSE	/ NET TV
PAUSE	
STOP	/ SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
TOP MENU	SHIFT+MENU
AB	SHIFT+EXIT
RDS	SHIFT+1
SURROUND	SHIFT+2
TUNE / BAND	SHIFT+3
BASS	SHIFT+4
ON SCREEN	SHIFT+
ZOOM	SHIFT+
REPEAT	SHIFT+BACK
TEST	SHIFT+INFO
SOUND	SHIFT+FAV
SLOW FWD	SHIFT+BLUE
SLOW REW	SHIFT+GREEN
A.REPLAY	SHIFT+YELLOW
S.T.CH ON/OFF	SHIFT+RED

