

ORIGINAL	SUPERIOR	ORIGINAL	SUPERIOR	ORIGINAL	SUPERIOR
POWER	POWER	INDEX	INFO	SLOW	SHIFT+LEFT
AUDIO	MUTE	MEMORY	EPG	SPEED	SHIFT+RIGHT
MENU	MENU	MARKER	FAV	TRACKING+	SHIFT+P+
CLEAR	EXIT	EJECT	 / NET TV	TRACKING -	SHIFT+P-
1/2/3/4/5	1/2/3/4/5	PAUSE		A - B / REPEAT	SHIFT+BAC
6/7/8/9	6/7/8/9	STOP	 / SMART	QTR OFF TIME	SHIFT+SLEE
0 / >10	0	REC	RED	TV VIDEO	SHIFT+ TV/D
INPUT NEXT	 / SOURCE	REW	GREEN	VPS / PDC	SHIFT+EPG
>100	-/--	PLAY	YELLOW	SOUND	SHIFT+FAV
DISPLAY		FWD	BLUE	DVD OPEN/CLOSE	SHIFT+ 
BASS BOOST		CLK / COUNT	SHIFT+POWER	TIMER REC	SHIFT+REI
ANGLE		DVD AUDIO	SHIFT+MUTE	PLAY MODE	SHIFT+YELLO
SURROUND		DVD MENU	SHIFT+MENU		
VOL+	VOL+	TOP MENU	SHIFT+EXIT		
VOL -	VOL -	DVD	SHIFT+1		
CH+	P+	RADIO	SHIFT+2		
CH -	P -	VCR	SHIFT+3		
NEXT TRACK / TUNE+	UP	JUMP	SHIFT+4		
PREV TRACK / TUNE -	DOWN	AD JUMP	SHIFT+5		
LEFT	LEFT	VCR PLUS	SHIFT+ 		
RIGHT	RIGHT	ATR	SHIFT+ 		
RESET	OK	ZOOM	SHIFT+ 		
RETURN	BACK	MENU TOGGLE	SHIFT+ 		
QTR ON TIME	SLEEP	SUBTITLE	SHIFT+ 		
TV VCR	TV/DTV	SET	SHIFT+OK		

