



ORIGINAL	SUPERIOR
POWER	POWER
AUDIO	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT NEXT	/ SOURCE
+10	-/--
TV VIDEO	
ZOOM	
A – B REPEAT	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
QTR ON TIME	UP
QTR OFF TIME	DOWN
SLOW	LEFT
SPEED	RIGHT
VCR PLUS	OK
RETURN	BACK
TIMER REC	SLEEP
TV / VCR	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
MEMORY	EPG
MARKER	FAV
EJECT	
PAUSE	
STOP	
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
SURROUND	SHIFT+MUTE
SET	SHIFT+MENU
JUMP	SHIFT+EXIT
+100	SHIFT+ -/--
ATR	SHIFT+
ANGLE	SHIFT+
AD JUMP	SHIFT+
RESET	SHIFT+BACK
CLOCK / COUNT	SHIFT+SLEEP
VPS / PDC	SHIFT+TV/DTV
INDEX	SHIFT+INFO
BASS BOOST	SHIFT+EPG
SOUND	SHIFT+FAV
PLAY MODE	SHIFT+YELLOW

