



We are sorry,
PICTURE
NOT
AVAILABLE

ORIGINAL	SUPERIOR
	POWER
	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
INFO	INFO
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
STOP	SHIFT+ 
REW	SHIFT+GREEN

[illegible]