



ORIGINAL	SUPERIOR
ON/STANDBY	POWER
MUTE	MUTE
MENU/PBC / MO./ST.	MENU
RESET	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV 1	[Source Icon] / SOURCE
+10	-/--
DISPLAY	[Display Icon]
ANGLE	[Angle Icon]
SETUP	[Setup Icon]
SUBTITLE	[Subtitle Icon]
MASTER VOLUME+	VOL+
MASTER VOLUME -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
DVD	TV/DTV
TITLE	INFO

ORIGINAL	SUPERIOR
PROGRAM	EPG
GAME	FAV
OPEN/CLOSE	[Up Arrow] / NET TV
SLOW	[Pause Icon]
STOP	[Stop Icon] / SMART
REW	GREEN
PLAY/PAUSE	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
1 / ALL	SHIFT+1
AV 2	SHIFT+ [Source Icon]
AM/FM TUNER	SHIFT+ -/--
SURROUND	SHIFT+ [Display Icon]
ZOOM	SHIFT+ [Zoom Icon]
LANG.	SHIFT+ [Language Icon]
EQ.	SHIFT+ [EQ Icon]
SELECT	SHIFT+OK
A – B	SHIFT+BACK
STEP	SHIFT+SLEEP
SEARCH	SHIFT+INFO

