



ORIGINAL	SUPERIOR
STANDBY	POWER
MUTE	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
VIDEO OUT	/ SOURCE
10+	-/--
DISPLAY	
ZOOM	
ANGLE	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
N/P	TV/DTV
TITLE	INFO
PROGRAM	EPG

ORIGINAL	SUPERIOR
OPEN/CLOSE	/ NET TV
PAUSE	
STOP	/ SMART
REV	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
SEARCH	SHIFT+EXIT
USB	SHIFT+
SETUP	SHIFT+
REPEAT	SHIFT+BACK
STEP	SHIFT+SLEEP
A - B	SHIFT+INFO
PBC	SHIFT+EPG
SLOW	SHIFT+

