



ORIGINAL	SUPERIOR
STANDBY	POWER
MUTE	MUTE
SETUP	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ SOURCE
GO TO	-/--
PROGRAM	
ZOOM	
SUBTITLE	
TTX / TITLE	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RETURN / EXIT	BACK
TV / RADIO	TV/DTV
INFO	INFO
EPG	EPG
FAVORITE	FAV

ORIGINAL	SUPERIOR
SLOW	
RED / REPEAT	RED
GREEN / A - B	GREEN
YELLOW / MENU	YELLOW
BLUE / ANGLE	BLUE
AUDIO	SHIFT+MUTE
P / N	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
OPEN / CLOSE	SHIFT+
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

