



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AUDIO	-/--
TEXT	
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP / CH+	UP
DOWN / CH -	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
TIMER	SLEEP
M/P	TV/DTV
i	INFO
EPG	EPG
FAV	FAV
RED / TV/SAT	RED
GREEN / TV/ 	GREEN

[illegible]