



ORIGINAL	SUPERIOR
POWER	POWER
AUDIO	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV	/ SOURCE
P. SCAN	-/--
DISPLAY	
ZOOM	
SETUP	
SUBTITLE	
SLOW+	VOL+
SLOW -	VOL -
PR+	P+
PR -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
REPEAT	BACK
COPY	SLEEP
TV/VCR	TV/DTV
TITLE	INFO

ORIGINAL	SUPERIOR
ANGLE	EPG
TV VIEW	FAV
OPEN/CLOSE	/ NET TV
STOP	/ SMART VIDEO
REC	RED
REW	GREEN
PLAY/PAUSE	YELLOW
FWD	BLUE
TIMER	SHIFT+POWER
EDIT	SHIFT+MENU
SEARCH	SHIFT+EXIT
VCR	SHIFT+1
DVD	SHIFT+2
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
A - B	SHIFT+BACK
REC SPEED	SHIFT+RED

