



ORIGINAL	SUPERIOR
	POWER
AUDIO	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	/ SOURCE
EDIT	-/--
DISPLAY	
ZOOM	
SETUP	
SUBTITLE	
SLOW+	VOL+
SLOW -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK / ENTER	OK
REPEAT	BACK
TIMER	SLEEP
TV / VCR	TV/DTV
TITLE	0

ORIGINAL	SUPERIOR
COPY	EPG
REC MODE	FAV
OPNE / CLOSE	/ NET TV
STOP	/ SMART
REC	RED
REW	GREEN
PLAY / PAUSE	YELLOW
FF	BLUE
SEARCH	SHIFT+EXIT
VCR	SHIFT+1
DVD	SHIFT+2
TV VIEW	SHIFT+3
A - B	SHIFT+BACK
ANGLE	SHIFT+SLEEP
P. SCAN	SHIFT+TV/DTV

