

ORIGINAL	SUPERIOR
DVD	
AUDIO	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DVD	 / SOURCE
+10	-/--
DISPLAY	
ZOOM	
SETUP	
SUBTITLE	
AB	VOL -
REPEAT	VOL+
SKIP NEXT	P+
SKIP PREV	P -
DOWN	DOWN
UP	UP
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
ANGLE	TV/DTV
SEARCH MODE	INFO

ORIGINAL	SUPERIOR
TOP MENU	EPG
MODE	FAV
OPEN / CLOSE	 / NET TV
PAUSE	
STOP	 / SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
VCR	
AUDIO	SHIFT+MUTE
MENU	SHIFT+MENU
CLEAR	SHIFT+EXIT
1/2/3/4/5	SHIFT+1/2/3/4/5
6/7/8/9/0	SHIFT+6/7/8/9/0
VCR	SHIFT+ 
+10	SHIFT+ -/--
DISPLAY	SHIFT+ 
QUICK-FIND	SHIFT+ 
SPEED	SHIFT+ 
SUBTITLE / IT-SET	SHIFT+ 
CH+	SHIFT+ P+
CH -	SHIFT+ P -
DOWN	SHIFT+DOWN

[illegible]