



ORIGINAL	SUPERIOR
FUNCTION	POWER
AUDIO SELECT	MUTE
MENU	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DISPLAY	
SPEED / SYSTEM	
CHANNEL+	P+
CHANNEL -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
SEARCH MODE	TV/DTV
QUICK FIND	INFO
TAPE COUNT. – RESET	EPG
TAPE COU. – MEMORY	FAV
EJECT	 / NET TV
PAUSE	
STOP	 / SMART
REC. / OTR.	RED
REW	GREEN
PLAY	YELLOW
F. FWD.	BLUE
SLOW	SHIFT+ 

[illegible]