


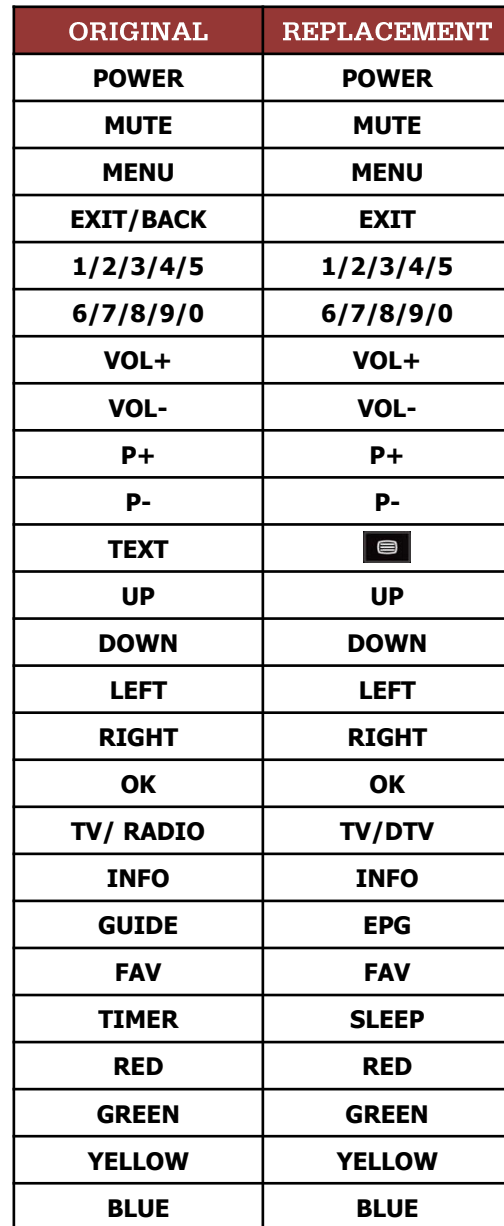

A black Superior 4 in 1 remote control. The top features a red Power button and a Mute button with a speaker icon. Below these are four small indicator lights and four function buttons: TV, SAT, DVD, and AUX. The next row contains MENU, EXIT, and SHIFT buttons. A numeric keypad (1-9, 0, +/-) follows. Below the numbers are TV/AV, 0, and +/- buttons. The next row includes PVR, SIZE, and SETUP buttons, each with a corresponding icon. A large directional pad with an OK button in the center is positioned below. The pad has +V, P+, and P- buttons around it. Below the pad are BACK, SLEEP, and TV/DTV buttons. The next row contains INFO, EPG, and FAV buttons. Below these are a red button with a triangle (labeled NET TV), a pause button (II), and a SMART button. The bottom row features four color-coded buttons: red (power), green (left), yellow (right), and blue (right with a double arrow). The bottom of the remote displays the text "SUPERIOR 4 in 1".