



ORIGINAL	SUPERIOR
	POWER
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
OPTIONS	
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
TV / RADIO	TV/DTV
INFO	INFO
GUIDE	EPG
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
SKIP NEXT	SHIFT+ P+
SKIP PREV.	SHIFT+ P-
PAUSE	SHIFT+ 
STOP	SHIFT+ 

[illegible]