



ORIGINAL	SUPERIOR
OPERATE	POWER
AUDIO / AUDIO SELECT	MUTE
DVD MENU	MENU
CANCEL	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT SELECT	 / SOURCE
CLOCK / TIMER	-/--
DISPLAY	
ZOOM	
SETUP	
SUBTITLE / ATR	
SKIP / INDEX NEXT	P+
SKIP / INDEX PREV	P -
UP / CH+	UP
DOWN / CH -	DOWN
LEFT / TRK -	LEFT
RIGHT / TRK+	RIGHT
ENTER	OK
 / RETURN	BACK
TIMER REC	SLEEP
DVD / VCR	TV/DTV
TITLE MENU / TOP MENU	INFO
ANGLE / COUNT. RESET	EPG
REC MDOE	FAV

ORIGINAL	SUPERIOR
EJECT	 / NET TV
PAUSE / STILL	
STOP	 / SMART
REC / OTR	RED
SEARCH REW	GREEN
PLAY	YELLOW
SEARCH FWD	BLUE
ZERO RETURN	SHIFT+ 
CM SKIP	SHIFT+ 
SLOW	SHIFT+ 
PROGRESSIVE	SHIFT+ 
ONE TOUCH REPEAT	SHIFT+BACK
A – B REPEAT	SHIFT+SLEEP
TV / VCR	SHIFT+TV/DTV
DUBBING	SHIFT+IN 
OPEN / CLOSE	SHIFT+
PLAY MODE	SHIFT+YELLOW

