



ORIGINAL	SUPERIOR
OPERATE	POWER
DVD MENU	MENU
OPEN/CLOSE	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT SELECT	 / SOURCE
A – B REPEAT	-/--
DISPLAY	
ZOOM	
SETUP	
TIMER REC	
CM SKIP	VOL+
CH+	P+
CH -	P -
CH+ / UP	UP
CH- / DOWN	DOWN
TRK- / LEFT	LEFT
TRK+ /RIGHT	RIGHT
ENTER	OK
BACK	BACK
CLOCK / COUNTER	SLEEP
DVD/VCR	TV/DTV
ANGLE /COUNT. RESET	INFO
TITLE / TOP MENU	EPG
DUBBING	FAV

ORIGINAL	SUPERIOR
EJECT	 / NET TV
PAUSE	
STOP	 / SMART
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
PLAY MODE/ REPEAT	SHIFT+ 
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
ONE TOUCH REPEAT	SHIFT+BACK
SLOW	SHIFT+SLEEP
TV/VCR	SHIFT+TV/DTV
REC MODE	SHIFT+RED
CANCEL	SHIFT+GREEN
SUBTITLE /ATR	SHIFT+YELLOW
ZERO RETURN	SHIFT+BLUE

