



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
CENTER MODE	AV
DISPLAY	
SPEAKER A TOGGLE	
SPEAKER B TOGGLE	
THEATER	
VOL+	VOL+
VOL-	VOL-
VOL CENTER+	UP
VOL CENTER-	DOWN
VOLUME REAR+	LEFT
VOLUME REAR-	RIGHT
3-CHANNEL	OK
SLEEP	SLEEP
USR	TV/DTV
FILE	EPG
TEST TONE	INFO
DELAY TIME	
SURROUND ON	BLUE
SURROUND OFF	GREEN
PRESET	SHIFT+FAV

ORIGINAL	SUPERIOR
PHONO	SHIFT+1
TAPE1	SHIFT+2
VCR1	SHIFT+3
DVD	SHIFT+4
TAPE2	SHIFT+5
CD	SHIFT+6
VCR2	SHIFT+7
AUX TV	SHIFT+8

