



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
INDEX / AB	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
TV / AV	/ SOURCE
-/-- / +10	-/--
LAG / AUDIO	
SIZE / ZOOM	
SUBPAGE	
TXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
	BACK
SLEEP	SLEEP
TV/RADIO / PRORAM	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
EPG / DVD MENU	EPG
EDIT	FAV
STILL / REPEAT	
HOLD	/ SMART
RED / TITLE	RED
GREEN / GOTO	GREEN
YELLOW / DVD MENU	YELLOW
BLUE / EJECT	BLUE
NICAM	SHIFT+MUTE
P. MODE	SHIFT+
S. MODE	SHIFT+
ANGLE / INTRO	SHIFT+
SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
FAV -	SHIFT+LEFT
FAV+	SHIT+RIGHT
SLOW	SHIFT+SLEEP
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

