



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
TV / AV	 / AV
SCAN	-/--
	P+
	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
← PR.	BACK
	SLEEP
TV / RADIO	TV/DTV
INFO	INFO
EPG	EPG
FAV	FAV
REC	
RED / AUDIO	RED
GREEN / POSITION	GREEN
YELLOW / TEXT	YELLOW

[illegible]