



ORIGINAL	SUPERIOR
STANDBY	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	 / SOURCE
+10	-/--
DISPLAY	
ZOOM	
FUNCTION	
TITLE/TTX	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
TV/RADIO	TV/DTV
GO TO	INFO
EPG	EPG

ORIGINAL	SUPERIOR
LANGUAGE	FAV
EJECT	 / NET TV
PAUSE/STEP	 / SMART TUBE
STOP	 / SMART VIDEO
REW	GREEN
PLAY	YELLOW
FWD	BLUE
FM/MENU	SHIFT+MENU
DVD/USB/DVB	SHIFT+ 
TFT ON/OFF	SHIFT+ -/--
VIDEO	SHIFT+ 
ANGLE	SHIFT+ 
SETUP	SHIFT+ 
SUBTITLE	SHIFT+ 
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
REPEAT	SHIFT+BACK
A - B	SHIFT+SLEEP
N/P	SHIFT+ TV/DTV
4:3/16:9	SHIFT+INFO
PROG.	SHIFT+EPG
R/L	SHIFT+FAV
AUTO	SHIFT+ 
SLOW	SHIFT+ 
RESUME	SHIFT+YELLOW

