

ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	 / SOURCE
CH. LIST	- / --
DISPLAY	
HOLD / ASPECT	
P. MODE	
TXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SLEEP	SLEEP
 ON / OFF	TV/DTV
EPG / S. PAGE	EPG

ORIGINAL	SUPERIOR
FAV	FAV
N.FLIX	ë ë ë / NET TV
	 / SMART TUBE
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO / NICAM	SHIFT+MUTE
---	SHIFT+1
REVEAL / ANTENNA	SHIFT+ 
SIZE	SHIFT+ 
S. MODE	SHIFT+ 
SUBTITLE / INDEX	SHIFT+ 
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
STOP	SHIFT+ 
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

