

ORIGINAL	SUPERIOR
POWER	POWER
 / AUDIO	MUTE
DISC MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DVD	AV
SEARCH	-/--
DISPLAY	
ZOOM	
SETUP	
 / SUBTITLE	
A – B	P+
REPEAT	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK / SELECT / ENTER	OK
 / RETURN	BACK
RANDOM	SLEEP
ANGLE	TV/DTV
TITLE	INFO
PROGRAM	EPG
MARKER	FAV

ORIGINAL	SUPERIOR
OPEN / CLOSE	
PAUSE / STEP	
STOP	
REW / SKIP BACKW.	GREEN
PLAY	YELLOW
FWD / SKIP FORWARD	BLUE
VCR	
POWER	SHIFT+POWER
 / AUDIO	SHIFT+MUTE
CLEAR	SHIFT+EXIT
1/2/3/4/5	SHIFT+ 1/2/3/4/5
6/7/8/9/0	SHIFT+ 6/7/8/9/0
AV	SHIFT+AV
VHS	SHIFT+ -/--
SEARCH	SHIFT+ 
CM SKIP	SHIFT+ P+
UP	SHIFT+UP
DOWN	SHIFT+DOWN
LEFT	SHIFT+LEFT
RIGHT	SHIFT+RIGHT
OK / SELECT / ENTER	SHIFT+OK
ez REPEAT	SHIFT+BACK
CLK. / CNT.	SHIFT+SLEEP
TV / VCR	SHIFT+ TV/DTV

[illegible]