


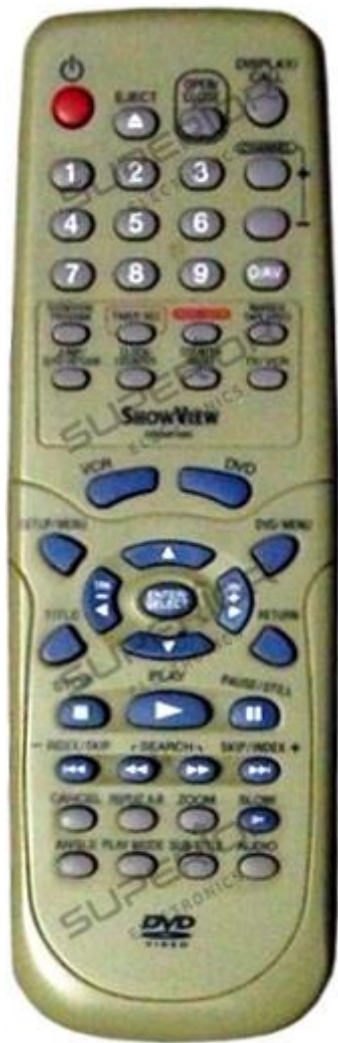

| ORIGINAL                   | SUPERIOR         |
|----------------------------|------------------|
|                            | <b>POWER</b>     |
| <b>AUDIO</b>               | <b>MUTE</b>      |
| <b>DVD / MENU</b>          | <b>MENU</b>      |
| <b>CANCEL</b>              | <b>EXIT</b>      |
| <b>1/2/3/4/5</b>           | <b>1/2/3/4/5</b> |
| <b>6/7/8/9</b>             | <b>6/7/8/9</b>   |
| <b>0 / AV</b>              | <b>0</b>         |
| <b>DVD</b>                 | / <b>SOURCE</b>  |
| <b>VCR</b>                 | <b>-/--</b>      |
| <b>ANGLE</b>               |                  |
| <b>ZOOM</b>                |                  |
| <b>PLAY MODE</b>           |                  |
| <b>SUB TITLE</b>           |                  |
| <b>SKIP NEXT / INDEX+</b>  | <b>P+</b>        |
| <b>SKIP PREV / INDEX -</b> | <b>P -</b>       |
| <b>UP</b>                  | <b>UP</b>        |
| <b>DOWN</b>                | <b>DOWN</b>      |
| <b>LEFT / TRK. -</b>       | <b>LEFT</b>      |
| <b>RIGHT / TRK.+</b>       | <b>RIGHT</b>     |
| <b>ENTER / SELECT</b>      | <b>OK</b>        |
| <b>RETURN</b>              | <b>BACK</b>      |
|                            | <b>SLEEP</b>     |
| <b>TV / VCR</b>            | <b>TV/DTV</b>    |
| <b>DISPLAY / CALL</b>      | <b>INFO</b>      |
| <b>PROGRAM</b>             | <b>EPG</b>       |

| ORIGINAL                   | SUPERIOR           |
|----------------------------|--------------------|
| <b>MARKER / TAPE SPEED</b> | <b>FAV</b>         |
| <b>OPEN / CLOSE</b>        | / <b>NET TV</b>    |
|                            |                    |
| <b>STOP</b>                | / <b>SMART</b>     |
| <b>REC / OTR</b>           | <b>RED</b>         |
| <b>SEARCH – REW</b>        | <b>GREEN</b>       |
| <b>PLAY</b>                | <b>YELLOW</b>      |
| <b>SEARCH – FWD</b>        | <b>BLUE</b>        |
| <b>TIMER REC</b>           | <b>SHIFT+POWER</b> |
| <b>SETUP / MENU</b>        | <b>SHIFT+MENU</b>  |
| <b>00:00:00</b>            | <b>SHIFT+0</b>     |
| <b>CHANNEL+</b>            | <b>SHIFT+ P+</b>   |
| <b>CHANNEL -</b>           | <b>SHIFT+ P -</b>  |
| <b>REPEAT A – B</b>        | <b>SHIFT+BACK</b>  |
| <b>CLOCK / COUNTER</b>     | <b>SHIFT+SLEEP</b> |
| <b>TITLE</b>               | <b>SHIFT+INFO</b>  |
| <b>JUMP / ↩ ZERO</b>       | <b>SHIFT+EPG</b>   |
| <b>EJECT</b>               | <b>SHIFT+</b>      |
|                            |                    |
|                            |                    |
|                            |                    |
|                            |                    |
|                            |                    |
|                            |                    |
|                            |                    |
|                            |                    |
|                            |                    |

