



ORIGINAL	SUPERIOR
	POWER
AUDIO SELECT	MUTE
MENU	MENU
CANCEL	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9	6/7/8/9
0 / AV	0
SPEED / SP/LP	-/--
CH/TR+	P+
CH/TR -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
ZERO / RETURN	BACK
CLOCK / COUNTER	SLEEP
TV / VCR	TV/DTV
INDEX	INFO
SHOWVIEW / PROGRAM	EPG
CALL	FAV
EJECT	 / NET TV
PAUSE / STILL	
STOP	 / SMART
REC / OTR.	RED

[illegible]