



ORIGINAL	SUPERIOR
	POWER
	MUTE
	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
	 / SOURCE
CH. LIST	-/--
	
	
TEXT	
V+	VOL+
V -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
DISNEY+	TV/DTV
INFO	INFO
EPG	EPG
NETFLIX	 / NET TV

[illegible]