



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	 / SOURCE
TV/RADIO	-/--
DISPLAY	
SIZE	
SUB.PG	
TTX	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
DTV/AV	TV/DTV
INDEX	INFO
GUIDE	EPG
FAV	FAV

ORIGINAL	SUPERIOR
ASPECT	 / NET TV
HOLD	 / SMART
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
MTS	SHIFT+MUTE
CANCEL	SHIFT+EXIT
REVEAL	SHIFT+ 
SUBTITLE	SHIFT+ 
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
STOP	SHIFT+ 
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY/PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

