



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
TITLE / EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	 / SOURCE
-/--	-/--
DISPLAY	
SIZE	
D. SETUP	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
TV / RADIO	TV/DTV
INDEX	INFO
EPG / D. MENU	EPG

ORIGINAL	SUPERIOR
FAV	FAV
HOLD	 / SMART VIDEO
RED / GO TO	RED
GREEN / ANGLE	GREEN
YELLOW / REPEAT	YELLOW
BLUE / A-B	BLUE
AUDIO / LANG.	SHIFT+MUTE
MEDIA	SHIFT+6
SUBTITLE	SHIFT+ 
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
SUBPAGE	SHIFT+DOWN
EJECT	SHIFT+ 
PAUSE	SHIFT+ 
STOP	SHIFT+ 
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

