



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
	/ SOURCE
MULTIMEDIA	-/--
TXT	
V+	VOL+
V -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
TV	TV/DTV
i	INFO
EPG	EPG
	FAV
NETFLIX	/ NET TV

ORIGINAL	SUPERIOR
F PLAY	
INTERNET	/ SMART
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
LANG.	SHIFT+MUTE
Q.MENU	SHIFT+MENU
SUBT.	SHIFT+
	SHIFT+BACK
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

