



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	 / SOURCE
CH.LIST	-/--
REVEAL	
SIZE/ZOOM	
SETUP	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
BACK	BACK
SLEEP	SLEEP
TV/RADIO	TV/DTV
INFO/DISPLAY	INFO

ORIGINAL	SUPERIOR
EPG/D.MENU	EPG
FAV/PROG	FAV
HOLD	 / SMART VIDEO
RED / ANGLE	RED
GREEN / SLOW	GREEN
YELLOW / A – B	YELLOW
BLUE / REPEAT	BLUE
AUDIO/LANG.	SHIFT+MUTE
P.MODE/LANG	SHIFT+ 
S.MODE/SEARCH	SHIFT+ 
SUBPAGE	SHIFT+ 
SUB – T	SHIFT+ 
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
T – SHIFT	SHIFT+SLEEP
INDEX/TITLE	SHIFT+INFO
EJECT	SHIFT+ 
STOP	SHIFT+ 
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY/PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

