



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	/ SOURCE
CH. LIST	-/--
DISPLAY	
PICTURE	
NICAM / A2	
TV / TXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SLEEP	SLEEP
TV / RADIO	TV/DTV
EPG	EPG

ORIGINAL	SUPERIOR
FAV	FAV
ASPECT	/ NET TV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
SOUND	SHIFT+MUTE
CANCEL	SHIFT+EXIT
REVEAL	SHIFT+
SUBTITLE	SHIFT+
SKIP NEXT / SUBPAGE	SHIFT+ P+
SKIP PREV / SIZE	SHIFT+ P -
REC LIST	SHIFT+FAV
EJECT	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

