



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DVD/USB	/ SOURCE
10+	-/--
DISPLAY	
ZOOM	
SUBTITLE	
TEXT/TITLE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
INFO	INFO
GUIDE	EPG
PROGRAM	FAV
STEP	

ORIGINAL	SUPERIOR
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE/PREF	BLUE
AUDIO	SHIFT+MUTE
SETUP	SHIFT+MENU
USB	SHIFT+
GO TO	SHIFT+ -/--
V-MODE	SHIFT+
N/P	SHIFT+
ANGLE	SHIFT+
REPEAT	SHIFT+BACK
A - B	SHIFT+SLEEP
PBC	SHIFT+INFO
COPY	SHIFT+FAV
EJECT	SHIFT+
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY/PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

