


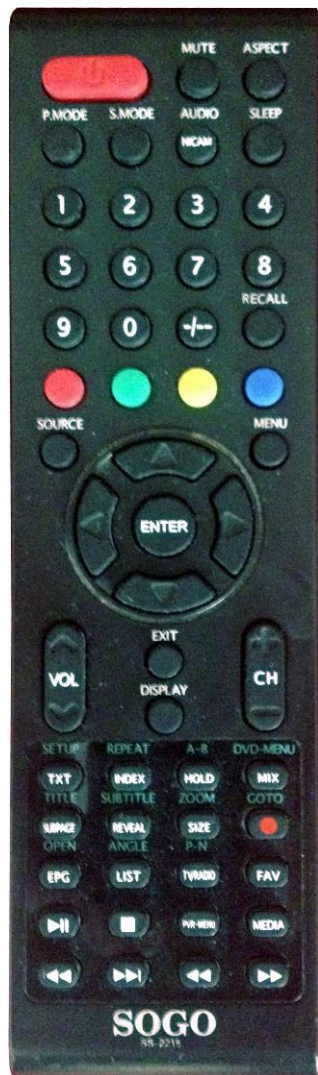

ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ AV
-/--	-/--
DISPLAY	
SIZE / ZOOM	
MIX / DVD-MENU	
TXT / SETUP	
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RECALL	BACK
SLEEP	SLEEP
TV/RADIO / P-N	TV/DTV
INDEX / REPEAT	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV	FAV
ASPECT	
HOLD / A-B	
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO / NICAM	SHIFT+MUTE
PVR MENU	SHIFT+MENU
P. MODE	SHIFT+1
S. MODE	SHIFT+2
MEDIA	SHIFT+6
LIST / ANGLE	SHIFT+ -/--
REVEAL / SUBTITLE	SHIFT+
SKIP PREV.	SHIFT+ P-
SKIP NEXT	SHIFT+ P+
TITLE / SUBPAGE	SHIFT+INFO
GO TO	SHIFT+FAV
OPEN	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

