



ORIGINAL	SUPERIOR
STANDBY / ON	POWER
MUTE	MUTE
TV MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV	/ SOURCE
LIST	-/--
DISPLAY	
PICTURE	
MIX	
TEXT	
VOL +/-	VOL +/-
CH/PAGE +/-	P +/-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK / ENTER	OK
LAST CH.	BACK
SLEEP	SLEEP
TV / DTV	TV/DTV
INFO	INFO
GUIDE	EPG
FAV	FAV

ORIGINAL	SUPERIOR
PC AUTO	/ NET TV
HOLD	/ SMART VIDEO
RED / MEMORY	RED
GREEN / CLEAR	GREEN
YELLOW / REPEAT A-B	YELLOW
BLUE / REPEAT DISC	BLUE
AUDIO / CANCEL	SHIFT+MUTE
FUNCTION	SHIFT+MENU
/ I/II	SHIFT+1
SOUND	SHIFT+2
DVD	SHIFT+
REVEAL	SHIFT+
SIZE / ANGLE	SHIFT+
SETUP	SHIFT+
SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
RADIO	SHIFT+ TV/DTV
TITLE	SHIFT+INFO
LCD MODE	SHIFT+FAV
PAUSE	SHIFT+
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

