



ORIGINAL	SUPERIOR
POWER	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	/ SOURCE
DISPLAY	
ASPECT	
LANG.	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SLEEP	SLEEP
TV/RADIO	TV/DTV
INDEX	INFO
FAV	FAV

ORIGINAL	SUPERIOR
AUTO	/ NET TV
HOLD	/ SMART VIDEO
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
NICAM/A2	SHIFT+MUTE
REC. MENU	SHIFT+MENU
P. MODE	SHIFT+1
S. MODE	SHIFT+2
REVEAL	SHIFT+
SIZE	SHIFT+
SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
SUBPAGE	SHIFT+DOWN
REPEAT	SHIFT+BACK
T.SHIFT	SHIFT+SLEEP
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY/PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

