



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ SOURCE
LIST	-/--
DISPLAY	
SIZE/MOUSE	
MIX	
TTX	
V+	VOL+
V -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
	BACK
SLEEP	SLEEP
TV/RADIO	TV/DTV
INDEX	INFO

ORIGINAL	SUPERIOR
GUIDE	EPG
FAV	FAV
ASPECT	/ NET TV
HOLD/REFRESH	/ SMART VIDEO
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
MTS	SHIFT+MUTE
HOME	SHIFT+MENU
CANCEL	SHIFT+EXIT
REVEAL	SHIFT+
S. MODE	SHIFT+
P. MODE	SHIFT+
SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
SUB. PG.	SHIFT+EPG
CAP	SHIFT+FAV
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY/PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

