



ORIGINAL	SUPERIOR
	POWER
AUDIO	MUTE
MENU	MENU
EXIT / RETURN	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
/ INPUT	/ SOURCE
TITLE LIST/TOP MENU	-/--
DISPLAY	
ANGLE	
SKIP NEXT / PAGE+	P+
SKIP PREV / PAGE-	P-
DOWN / UP	DOWN / UP
LEFT / RIGHT	LEFT / RIGHT
ENTER	OK
TIMER	SLEEP
TV / DVD	TV/DTV
INFO	INFO
GUIDE	EPG
REC MODE	FAV
EJECT	/ NET TV
PAUSE	
STOP	/ SMART
REC	RED

ORIGINAL	SUPERIOR
REW / STEP BACK.	GREEN
PLAY	YELLOW
FWD / STEP FWD	BLUE
SYSTEM MENU	SHIFT+MENU
CLEAR	SHIFT+EXIT
HDD	SHIFT+1
DVD	SHIFT+2
DUB HDD/DVD	SHIFT+3
ZOOM	SHIFT+
SUBTITLE	SHIFT+
PROG. -/+	SHIFT+ DOWN/UP
* / *	SHIFT+ LEFT/RIGHT
PLAY MODE	SHIFT+FAV
TV PAUSE	SHIFT+
REC STOP	SHIFT+
RED	SHIFT+RED
GREEN	SHIFT+GREEN
YELLOW	SHIFT+YELLOW
BLUE	SHIFT+BLUE
TV	
	SHIFT+POWER
	SHIFT+AV
VOL -/+	SHIFT+ VOL-/+
PROG. -/+	SHIFT+ P-/+

