



ORIGINAL	SUPERIOR
	POWER
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	/ SOURCE
REC. MODE	-/--
DISPLAY	
SYNCHRO REC.	
SYSTEM MENU	
PROG+	P+
PROG -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
/ RETURN	BACK
TIMER	SLEEP
TV / DVD	TV/DTV
INFO	INFO
GUIDE	EPG
	FAV
EJECT	/ NET TV

ORIGINAL	SUPERIOR
PAUSE	/ SMART TUBE
STOP	/ SMART VIDEO
REC	RED
REW / DAY -	GREEN
PLAY	YELLOW
FWD / DAY+	BLUE
AUDIO	SHIFT+MUTE
TOP MENU	SHIFT+MENU
DVD	SHIFT+1
HDD	SHIFT+2
ZOOM	SHIFT+
SUBTITLE	SHIFT+
	SHIFT+LEFT
	SHIFT+RIGHT
SKIP NEXT / PAGE+	SHIFT+ P+
SKIP PREV / PAGE -	SHIFT+ P -
TV / RADIO	SHIFT+ TV/DTV
TITLE LIST	SHIFT+INFO
MARKER	SHIFT+FAV
REC STOP	SHIFT+
RED	SHIFT+RED
GREEN	SHIFT+GREEN
YELLOW	SHIFT+YELLOW
BLU	SHIFT+BLU

