



ORIGINAL	SUPERIOR
	POWER
MUTING	MUTE
OPTIONS	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
FM MODE	/ AV
ALPHABET SEARCH	-/--
PARTY	
BASS	
TREBLE	
CHARACTER	
VOLUME+	VOL+
VOLUME -	VOL -
SKIP NEXT	P+
SKIP PREV.	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
TUNING MODE	TV/DTV
TIMER MENU	EPG

ORIGINAL	SUPERIOR
PLAY MODE	FAV
OPEN / CLOSE	
PAUSE	
STOP	
REW	GREEN
PLAY	YELLOW
FWD	BLUE
Air Play	SHIFT+1
CD	SHIFT+2
HOME NETWORK	SHIFT+3
MUSIC SERVICES	SHIFT+4
TUNER	SHIFT+5
USB	SHIFT+6
FUNCTION+	SHIFT+UP
FUNCTION -	SHIFT+DOWN
-	SHIFT+LEFT
+	SHIFT+RIGHT
	SHIFT+BACK

