



ORIGINAL	SUPERIOR
	POWER
MUTING	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
FUNCTION	 / SOURCE
DVD DISPLAY	
ANGLE	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT/PRESET +	P+
SKIP PREV/PRESET -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
TUNER/BAND	TV/DTV
PLAY MODE	FAV
AUTO FORMAT DIRECT	 / NET TV
PAUSE	

[illegible]