



ORIGINAL	SUPERIOR
	POWER
MUTING	MUTE
MENU/HOME /DISPLAY	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ SOURCE
D. TUNING	-/--
DISPLAY	
TOUCH	
TOOLS / OPTIONS	
SUBTITLE	
VOLUME+	VOL+
VOLUME -	VOL -
SKIP/PRESET NEXT	P+
SKIP/PRESET PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
+	OK
/ RETURN	BACK
SLEEP	SLEEP
TV	TV/DTV
DIMMER	INFO

ORIGINAL	SUPERIOR
	EPG
THEATRE	FAV
EJECT	/ NET TV
PAUSE	
STOP	/ SMART
REW / STEP B. / TUN. -	GREEN
PLAY	YELLOW
FWD / STEP F. / TUN.+	BLUE
AUDIO	SHIFT+MUTE
DVD MENU	SHIFT+MENU
DVD TOP MENU	SHIFT+EXIT
ANGLE	SHIFT+
SOUND MODE+	SHIFT+ VOL+
SOUND MODE -	SHIFT+ VOL -
* / REPLAY	SHIFT+LEFT
* / ADVANCE	SHIFT+RIGHT
ENTER	SHIFT+OK
REPEAT	SHIFT+BACK
NIGHT	SHIFT+SLEEP
SYSTEM MENU	SHIFT+EPG
PICTURE NAVI.	SHIFT+
ONE-TOUCH PLAY	SHIFT+YELLOW

